




## FTM-ProVis Professional

Software for In-Line Film Thickness Measurement and Process Control

**FTM-ProVis Professional** is based on our convenient FTM-ProVis Lite software package and has been extended especially for the needs of in-line film thickness measurement tasks of thin transparent layers using our **Transpec** film thickness gauges. The software supports single and 3-axes traverses for scanning thickness profiles on web coating machines. FTM-ProVis Professional reports thickness results and various measurement status information to digital and analog out-ports, by which a closed-loop process control can be achieved. Aside, the software is used for our **FTM-Micro** fiber optics coupled microscope with live camera view, which permits film thickness measurement on very small spots.

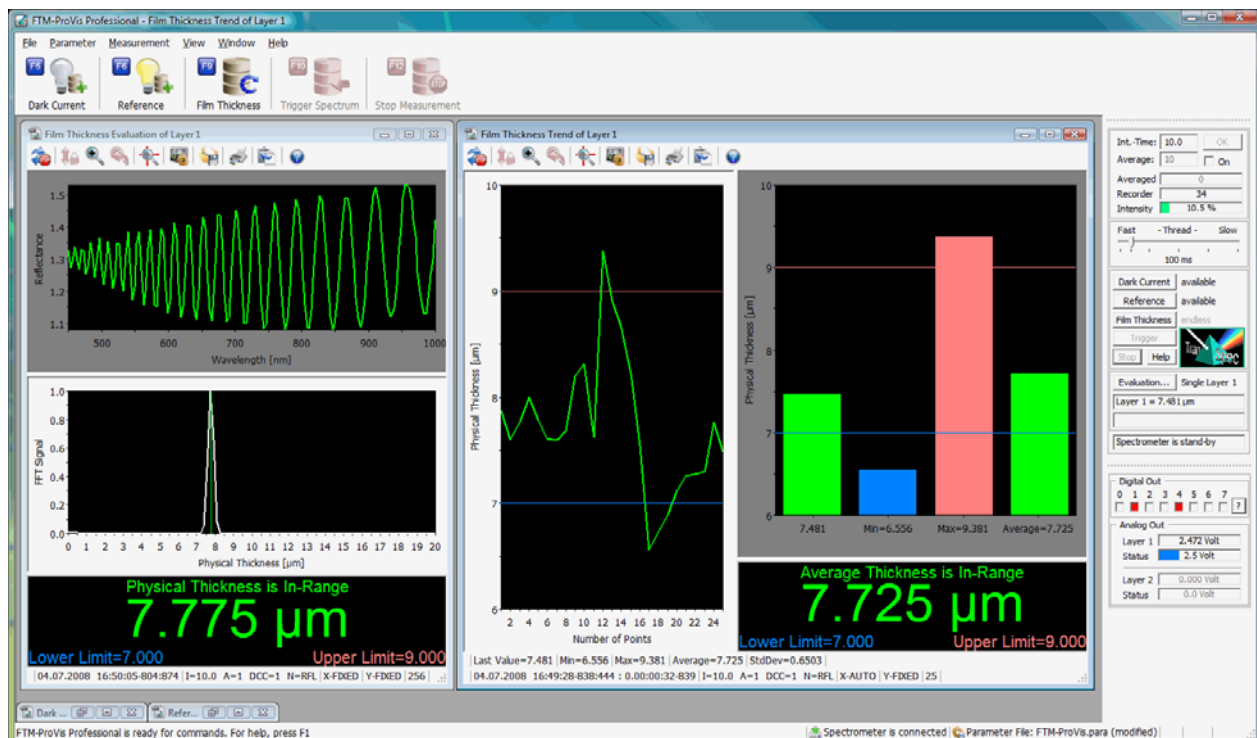

Exemplary screenshot of FTM-ProVis Professional

FTM-ProVis Professional uses an improved Fast-Fourier Transformation (FFT) algorithm to determine the film thickness from measured white-light interference spectra of thin transparent layers, which ensures high-precision results in the entire measurement range. The film thickness result is computed in real-time, can be displayed in various different on-line charts, logged to a text file and reported to analog ports.

Technical specifications on next page ►



---

## FTM-ProVis Professional Software • Technical Specifications

August 2008, related to version 3.1, without guarantee, subject to changes

### Minimum Hardware and Software Requirements

- PC/Laptop with at least Pentium-4
- Windows XP or Windows Vista
- CD-ROM drive for installation
- Graphics adapter with at least 1024 x 768 pixel, 1280 x 1024 pixel is recommended
- TranSpec Film Thickness Gauge (USB 2.0 required)

### General Description

- Multi-Threaded and Multiple Document Interface handling
- Shell registration for drag-and-drop of FTM-ProVis Professional document files
- Minimum requirement of resource and memory
- Programmed in Visual C++ by use of the Microsoft Foundation Classes (MFC)
- Consideration of the Microsoft Application Design Guide: menu toolbar, status bar, tool tips, HTML on-line help
- Fully supports Windows themes and multi-monitor use
- Software documentation as detailed, color printed user's manual with many examples

### Film Thickness Measuring Range

The film thickness range generally measurable with a TranSpec gauge is approximately 1 to 150 microns ( ~ 0.04 to 6 mil ) optical film thickness, but depends essentially on the spectral range and the spectral resolution of the spectrometer module assembled to TranSpec. Other factors which determine the measurable film thickness range are the refraction index and its dispersion, as well as the currently selected spectral evaluation range.

### High-Precision and Fast Evaluation Method, also for Double-Layers

- Evaluation of interference spectra with the help of a special Fast-Fourier-Transformation (FFT)
- Run time-optimized algorithm, evaluation time is less than a millisecond
- Special algorithm for highly accurate sub-pixel determination of the FFT peak position (film thickness result)
- Selectable spectral evaluation range of the interference spectrum
- Consideration of refraction index and dispersion (Cauchy Dispersion Correction)
- Selectable film thickness evaluation range in the FFT spectrum for fully automatic measurement of double layers

### Various Options for Measurement and Visualization

- Supports triple axes scanning bridges in order to perform x/y/z-coordinate controlled, fully automatic measurements of rectangular thickness profiles with up to 250 x 250 values per scan
- Supports single axis traverses for continuously scanning forwards/backwards in cross-direction of a web coater
- Supports FTM-Micro fiber optics coupled microscope with live camera view for very small measurement spot sizes
- Supports 8-channel TTL out for reporting measurement status information and thickness high/low limits
- Supports 4-channel analog out (unipolar 0-10 volt) for reporting film thickness values and high/low limits
- Performs manually or fully automatic triggered measurement runs, trigger by timer, TTL input or traverse controlled
- Real-time representation of Interference and FFT spectrum during measurement
- Real-time representation of the film thickness results as trend and bar chart
- Logs up to 62,500 thickness results to read-shared text files, accessible by third-party software during measurement
- Logs up to 62,500 spectra as Spectra-Recorder, which permits a subsequent off-line film thickness re-evaluation
- Saves all your parameter settings into individual parameter files, password protection possible
- Quick access to last used parameter and Spectra-Recorder files

---

**Note** TranSpec is a registered German trademark of Dipl.-Ing. (FH) Th. Fuchs, Engineer's Office for Applied Spectroscopy. All other mentioned product names are or possibly might be trademarks or registered trademarks of their owners.