




Film Thickness Measurement

Application Note

Measurement Method Principles

A commonly well known effect, which occurs for example with soap bubbles or on a thin oil film on water, is used here for the determination of the film thickness. You can see many colors, which change according to the layer thickness, e.g. when the soap bubble is blown up.


These "colors at thin layers" are based on the interference phenomenon, i.e. on the super-position of light waves which have been reflected at the front and back side of the layer (in other words: at two boundaries with different optical densities).

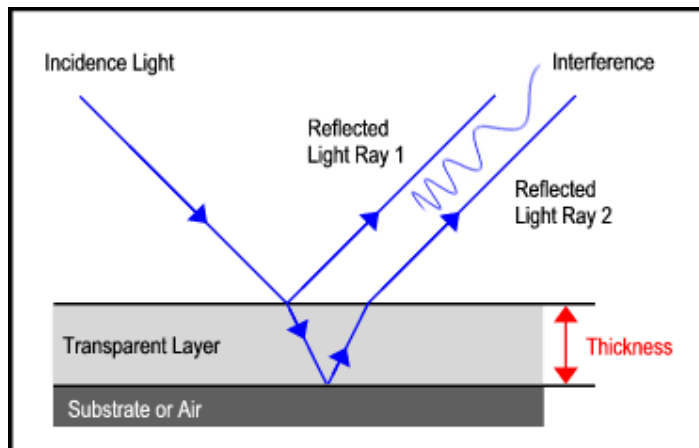

The interference model

The undisturbed superposition of the two reflected light rays 1 and 2 leads to periodical amplification and extinction in the reflectance spectrum of a continuum light source, like from a halogen spectral lamp as a pseudo white-light source.

Since the superposition of the two reflected light rays is not purely additively, an interference spectrum occurs. The figure at the right shows exemplary the interference spectrum of a 1 μm and 2 μm layer.

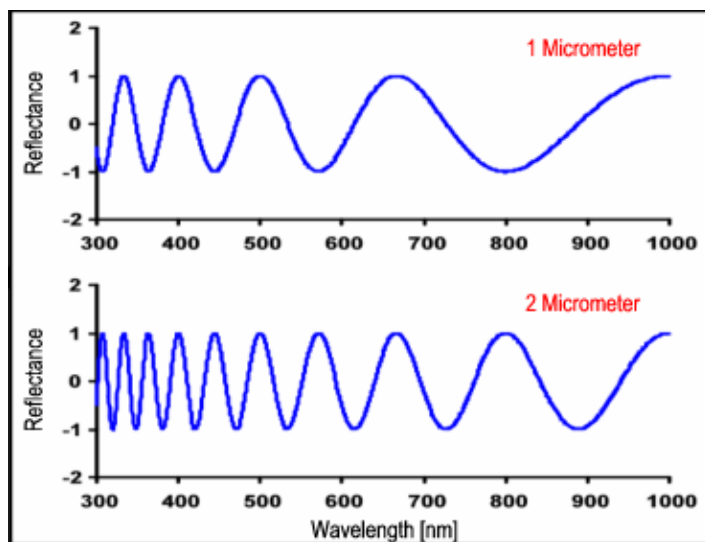


Examples of interference spectra

Continued on next page ►





Film Thickness Gauges and Measurement Setup

The interference spectra of thin transparent or semi-transparent layers are measured and analyzed by our FTM-Lite thickness gauges or TranSpec spectrometer and HSL halogen lamp, as shown in the following schematic figure:

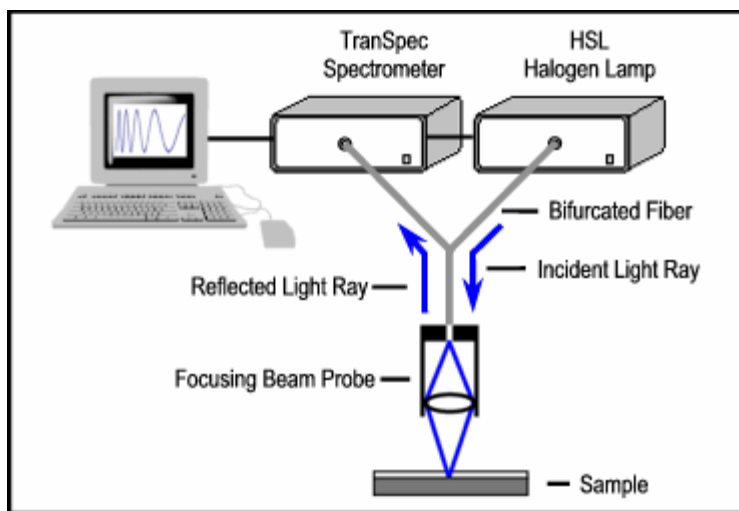

Schematic gauge setup

The sample is illuminated through a bifurcated fiber optics, which is connected to the spectrometer and a halogen lamp as pseudo white-light source. The reflected interference spectrum is guided back to the spectrometer, where it is analyzed and the thickness is computed.

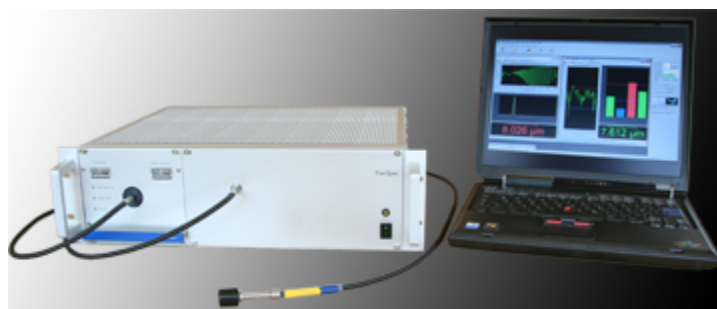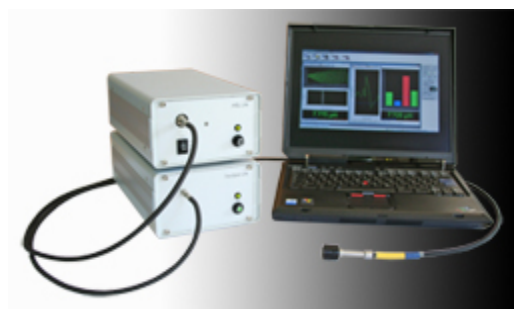


The picture on the left shows our FTM-Lite VIS thickness gauge used for lab measurements. The picture at the right shows the TranSpec process spectrometer with integrated deuterium/halogen lamp in standard 19-inch chassis used for in-line measurement tasks.

Continued on next page ►



Application Examples


Protective Lacquer Coatings

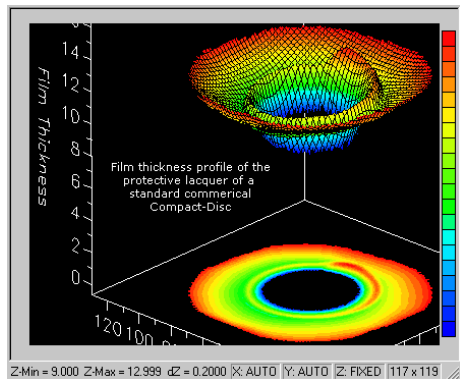

Film thickness measurement of dry and wet coatings, including the possibility of simultaneous two-layer control. Our technology and gauges are used by the world's leading manufacturers of automobile head lights and Compact Discs.

The chart shows a 3D film thickness profile of a protective lacquer of a standard commercial Compact-Disc in the thickness range of 9 to 13 μm . Note the spot where the liquid lacquer has been dropped during spin coating!


Vapor Deposition Layers and Photo-Resist Coatings

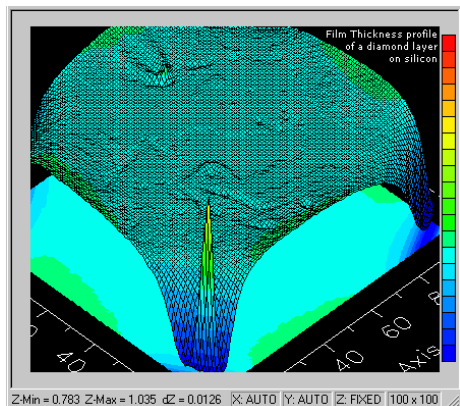

The highly precise technology of our thickness gauges determines the film thickness of even sub-micron layer structures.

The chart shows a 3D film thickness profile of a 10 mm² diamond layer on a silicon wafer in the thickness range of 800 to 1000 nanometers. Each bar color maps a thickness range of only 12 nm. Note the microstructures on the plateau of the diamond layer!

In-line Thickness Measurement on Web Coater

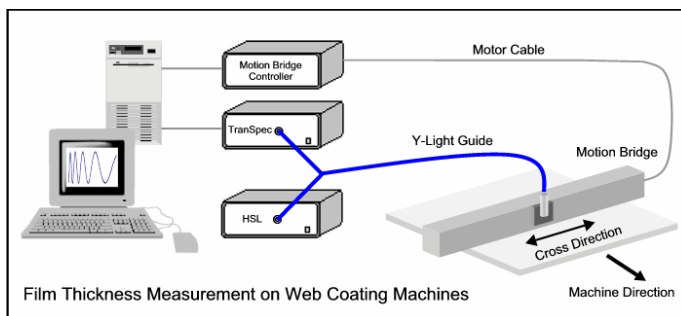

The film thickness profile of web coated foils can be determined using a scanning bridge and our Transpec gauges, which permits an intermediate feedback for your process control.

The figure shows a schematic gauge setup on a web coating or foil machine. The actual sensor is mounted on a linear motion bridge and continuously moved forwards and backwards in cross-direction to the coating machine.